## MODEL BL-2FT | BL-4FT



Instruction Manual



#### WARNING

# WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

- 1. DISCONNECT POWER BEFORE INSTALLATION
- 2. The installation should be performed by qualified electricians or lighting technicians
- 3. Product must be installed in accordance with the voltage and frequency range 100-277V AC, 50/60Hz
- 4. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or any other sharp objects Before Installation, please identify the version you buy is Non-linkable or Linkable Version according to the picture

#### **CAUTION**

PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES. Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician.

### **INSTALLATION GUIDE**



#### **Accessories including:**







Non-Linkable Version

Mounting Clips-2pcs

Screws-2pcs

Plastic Anchor-2pcs

Wiring Nuts-3pcs

- 1. Corresponding Installation position, set a suitable clamp position
- 2. Pushing holes for screw at the surface of the installation platform, use the screw to fix the clips (see Fig.1)
- 3. Lock one side of the lamp body to the clips, then the other side (see Fig.2)
- 4. Check if the lamp is located firmly (see Fig.3)
- 5. Complete wiring (L for Live, G for Ground, N for Neutral)







 




Fig.1

Fig.2

Fig.3