


### MODEL 8207 | 8208

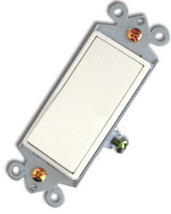

### WARNING

**WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.**

1. To avoid fire, shock, or death, turn OFF power at circuit breaker or fuse and test that the power is off before wiring
2. To be installed and/or used in accordance with appropriate electrical codes and regulations
3. Use this device with copper or copper clad wire only

### CAUTION

**PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.**

**Electrical products can cause death or injury, or damage to property.**

**If in any doubt about the installation or use of this product, consult a competent electrician.**

### INSTALLATION GUIDE

**1. a) Side Wire:**

Remove insulation approximately 3/4" (1.9cm). Connect wires per diagram as follows:

Loop wires clockwise 3/4 turn around terminal screws. Firmly tighten screws over wire loops.

**b) To Back Wire:**

Remove insulation per strip gauge on device approximately 1/2" (1.3cm).

Insert wires into holes next to approximate terminal screws. Tighten screws firmly.

\* Back and side wire terminal screws accept up to #12 AWG copper or copper clad wire.

2. Mount device using long mounting screws. Attach wall plate.

3. Restore power at circuit breaker or fuse. Installation complete.

ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.