

## MODEL BDA



### WARNING

**WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED TECHNICIAN.**

1. Shutter spindle should be vertical
2. Please read the instructions before use
3. It is recommended that you install the shutter into horizontal ducting


### CAUTION

**PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.**

**Electrical products can cause death or injury, or damage to property.**

**If in any doubt about the installation or use of this product, consult a competent technician.**

### INSTALLATION

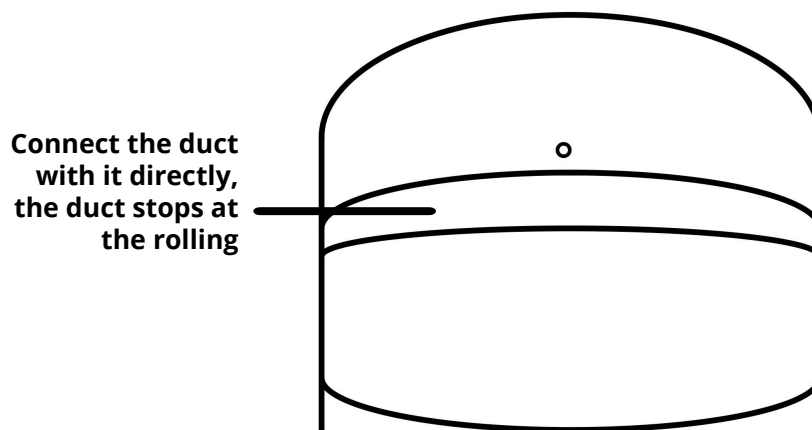

1. Connect the duct with the BDA directly
2. The duct stops at the rolling of the BDA

ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.