


## **INSTALLATION GUIDE**


**1.** Open the cover of the junction box.

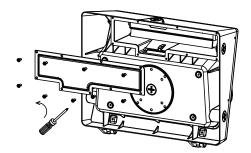

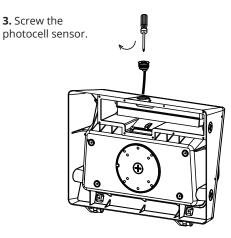


**5.** Lock the cover of the junction box.

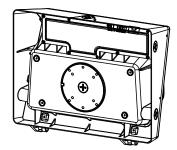

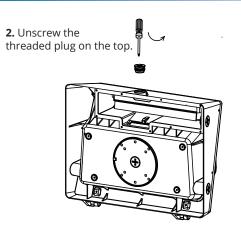

**4.** Make wire connection according to the below wire diagram.

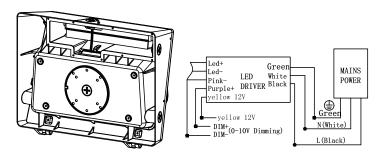

13376 Comber Way Surrey BC V3W 5V9

205 Summerlea Rd Brampton, ON L6T 4E5

