



### WARNING

**WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.**

1. LED Slim Lights are suitable for indoor use only. DO NOT use outdoors
2. Please keep the LED Slim Lights away from any corrosive substance, and please use damp or dry cloth when you clean them
3. LED Slim Lights can only be installed by a qualified electrician
4. Before installation or maintenance, please disconnect the power to prevent electric shock

### Application Notice

1. For your safety, this fixture must be wired in accordance to local electrical codes and ordinances
2. Make certain power is OFF from the electrical panel before starting installation or attempting any maintenance

### CAUTION

**PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.**

**Electrical products can cause death or injury, or damage to property.**

**If in any doubt about the installation or use of this product, consult a competent electrician.**

### INSTALLATION GUIDE

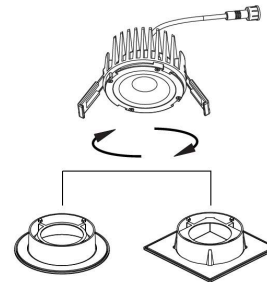
#### Tools Required

- Saw
- Measuring Tape
- Electrical Wiring (use type and gauge suitable for application to connect the fixtures)

#### Pre-Installation

1. Mount the appropriate trim on the module
2. Twist the trim to lock on the module securely
3. Turn power OFF from the electrical panel before starting installation
4. Locate a suitable position to plate the fixture and open in accordance to the cut-hole dimensions (refer to HOLE CUT SIZE TABLE on the right for appropriate size)
5. Run electrical wire from the switch (power supply) through the mounting hole — use NMD90 Romex or BX cable

Fig.1



#### Hole Cut Size (Cutout Size) for 4" Regress Module

Ø 3-47/64"  
(95 mm)

#### Compatible Dimmers Table

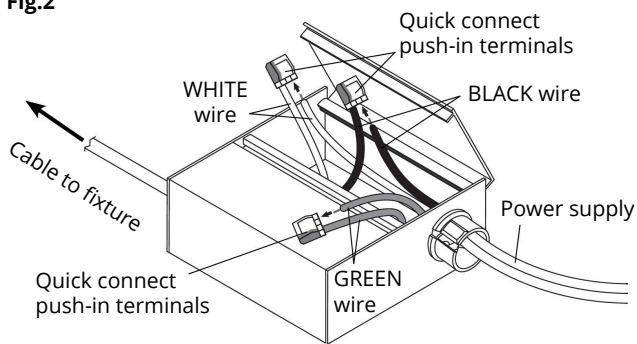
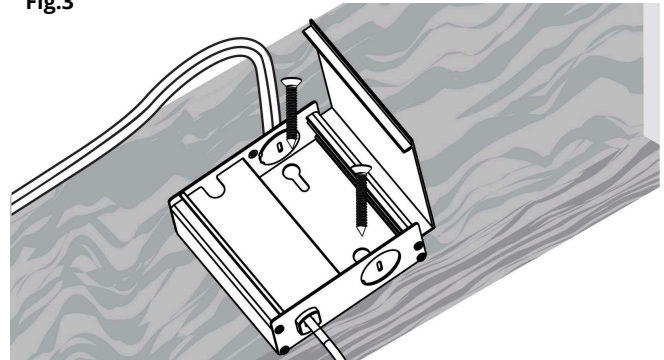
Model	Description
DMD-ELV	Single pole 3-way dimmers

#### Compatible Mounting Plates Table

Model	Description
PLATE4-HB	Mounting Plates for ORTECH 4" Slim Lights
PLATE26-4	New Construction Plates for ORTECH 4" Slim Lights

## MODEL SLIM4RG

### INSTALLATION GUIDE

**Fig.2****Fig.3**

### Driver Wiring

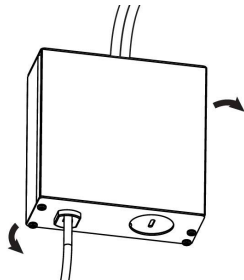
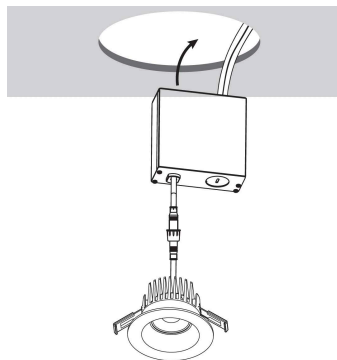
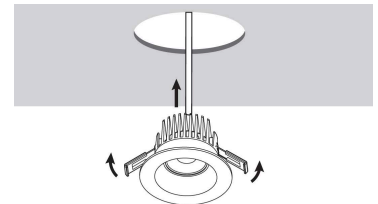
1. Open the hardwire box swing cover and remove the appropriate knockout(s)
2. Insert the electrical supply cable through the knockout and secure with a cable connector (sold separately)
3. Using wire nuts, connect GREEN ground wire of cable to GREEN wire on box.  
Connect WHITE wire of cable to WHITE wire of box. Connect BLACK wire of cable to BLACK wire of box (see fig.2)
4. Place all wiring and connections back into the box and close the cover
5. Insert hardwire box through the mounting hole (see fig.3)

#### New Construction Applications

Hardwire box shall be firmly secured to studs, joists, or similar fixed structural units

#### Remodel Applications

DO NOT require the hardwire box to be firmly secured after the mounting plates, studs, joists, or structural units have been concealed

**Fig.4****Fig.5****Fig.6**

### Fixture Installation

1. Connect the fixture to the hardwire box by inserting and twisting the male / female connectors (see fig.5)
2. Push spring loaded clips on the fixture upwards and insert fixture base into the mounting hole.  
Release the clips and fixture will be pulled flush to the ceiling (see fig.6)
3. Once assembly is complete, turn on power to confirm fixture is working properly